## MARSTEK Smart meter reader SMR-W/C



Product Introduction Diagram

Please confirm your meter manufacturer and model in the app.
If you use the infrared interface, you only need to plug the power adapter into the IN interface.
If you need to use infrared communication, please make sure your meter is unlocked.
Connect the P1 interface to the meter as shown. Do not use the P1 cable for other devices.

## External antenna connection diagram



